

Thank you for purchasing your ClearSound Live Window Transducer. Please find simple instructions in order to get your ClearSound connected and running. If you have any further questions regarding the ClearSound System or any other soundleisure products, please contact us: -

Technical

Power Handling - 2 x 20 watts RMS

Freq Response - 20Hz - 20KHz (Dependant on driven surface)

Dimensions - 120mm x 75mm

Power Supply - 18v DC Centre positive - 2.5mm connector

Kit Comprises of:

ClearSound Live Transducer

Power Supply - 18v DC

Window Fixing Kit and Pad

Connections:

A : Power Input - 18V DC centre positive 2.5 mm connector

B : Audio Input - 1V - 2V PP

C : Audio Output for connection to an additional ClearSound unit.

D. Multiple setting switch. ●
Switch settings alter the output of the ClearSound to allow gain boost /cut and stereo setting when used with an optional ClearSound slave unit.

	ON	OFF
SW1	MONO	STEREO
SW2	CH2 ON	CH2 OFF
SW3	GAIN	GAIN
SW4	GAIN	GAIN

SW3 and SW4 control the level of gain increase/ decrease the table below shows the effect these switches can have on the output (see notes)

SW3	SW4	GAIN (dB)
ON	ON	20
OFF	ON	26
ON	OFF	32
OFF	OFF	36


Signal IN. 3.5 Stereo Jack ●

Volume Control ●

Power Supply 18v DC ●

Speaker OUT. 1.3 Centre positive ●

Power Output. Connection to optional ClearSound Slave Speaker

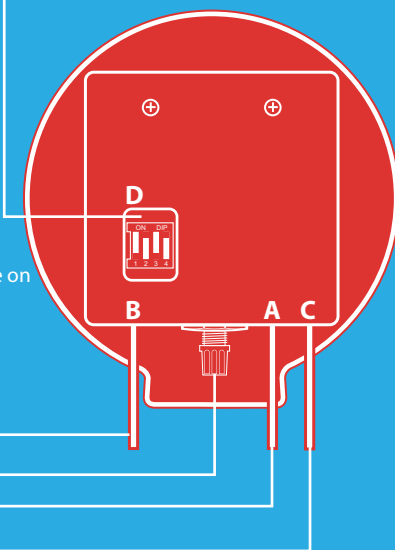

Notes

Please note that boosting gain will not always boost clarity. It is often better to cut gain and alter the volume to compensate.

On initial power up SW3 and SW4 (gain settings) should be set to "ON"

How to fix your ClearSound to a window.

To affix the unit to the window. Remove the backing from the window fixing pad and stick to the face of the window fixing unit. Remove the reverse of the backing sheet and then press to the window in the required position. Once in place you can now screw the ClearSound unit to the fixing pad. You can now stick the ClearSound graphic sticker to the outside of the window.

scanmagnetics.com

lived
clearsound
window transducer speaker



Thank you for purchasing your ClearSound 2020mp3 Window Transducer. Please find simple instructions in order to get your ClearSound connected and running. If you have any further questions regarding any of the ClearSound Systems or any other soundleisure products, please contact us: -

Technical

Power Handling - 2 x 20 watts RMS
 nominal impedance - 8 ohms
 Freq Response - 20Hz - 20KHz (Dependant on driven surface)
 Dimensions - 165mm x 90mm
 Power Supply - 18v DC Centre positive - 2.5mm connector
 File Formats : .MP3, .WMA

Kit Comprises of:

ClearSound 2020mp3 Transducer
 Memory stick
 Power Supply - 18v DC
 Window Fixing Kit and Pad

Optional Microwave sensor is available. This allows the ClearSound 2020 Mp3 to activate and play only when somebody walks in front of the device. Contact Sound leisure for additional information.



D. Multiple setting switch.

Switch settings alter the output of the ClearSound 2020 to allow gain boost /cut and stereo setting when used with an optional ClearSound slave unit.

	ON	OFF
SW1	MONO	STEREO
SW2	Random Play	OFF
SW3	GAIN	GAIN
SW4	GAIN	GAIN

SW3 and SW4 control the level of gain increase/ decrease the table below shows the effect these switches can have on the output (see notes)

SW3	SW4	GAIN (dB)
ON	ON	20
OFF	ON	26
ON	OFF	32
OFF	OFF	36

7 Pin Connector for optional Motion Detector Unit.

Volume Control

Memory Stick

Power Supply 18v DC

Speaker OUT. 1.3 Centre positive

Power Output. Connection to optional Passive ClearSound Slave Speaker

How to fix your ClearSound to a window.

To affix the unit to the window. Remove the backing from the window fixing pad and stick to the face of the window fixing unit. Remove the reverse of the backing sheet and then press to the window in the required position. Once in place you can now screw the ClearSound unit to the fixing pad. You can now stick the ClearSound graphic sticker to the outside of the window.

scanmagnetics.com

2020mp3
clearsound
 window transducer speaker

